

DR. MERCOLA®



ClearAir
*personal
air purifier*

Owner's Manual

Welcome

Thank you for purchasing Dr. Mercola's *ClearAir* Personal Air Purifier, designed to propel clear, fresh air into your individual breathing space. The sleek, lightweight design and silent propulsion system provide discreet and convenient purification. Equipped with a solid platinum emitter and electroplated gold grid with advanced plasma discharge, Dr. Mercola's *ClearAir* Personal Air Purifier is ideal for purifying your breathing space in public places.

Warning

The *ClearAir* Personal Air Purifier is not a medical device and should not be used to alleviate any medical issues that you may have. Please consult your physician before using the *ClearAir* Personal Air Purifier if you are worried that the machine could cause adverse effects. If you have a medical condition, consult your physician before using this product. Not recommended to be used by children under 4 years of age or by those people with pacemakers.


Cautions

Do not immerse unit in liquid or allow unit to come in contact with water. There are no user serviceable parts inside. Do not open or attempt to repair the inside of the unit.


Packaged Materials

- 1 ClearAir Personal Air Purifier
- 1 USB A to USB Type C Power Cord (adapter not included)
- 1 Cotton Breakaway Neck Lanyard

Bottom Diagram:

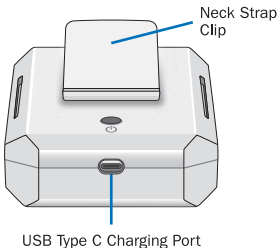

Back Diagram:

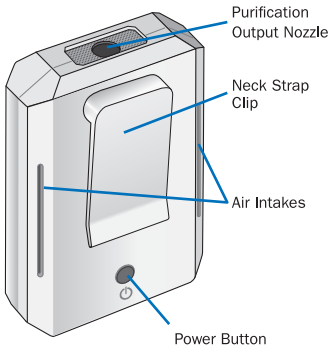

Getting Started

Place the Breakaway Neck Lanyard through the Neck Strap Clip on the back of your ClearAir Personal Air Purifier. Your ClearAir Personal Air Purifier should be located roughly 6 to 8 inches beneath your nose with the metal grid facing upward. For optimal performance, be sure to use the Neck Strap instead of attaching the clip to your shirt or pocket. The unit will need to have a centered placement to ensure your breathing space is completely covered.

Press the Power Button on the back of your ClearAir Personal Air Purifier to turn the unit ON. With the unit turned on and in the proper position, you will feel clean air flow upward as you inhale.

When not in use, turn off your ClearAir Personal Air Purifier by pressing the Power Button again.

NOTE: This product does not contain a fan or mechanical blower.

NOTE: Windy conditions may interfere with the effectiveness of the unit.

Charging

Insert the supplied USB Type C Cable into the Charging Port on the bottom of the ClearAir Personal Air Purifier and the other end into your wall charger or powered USB port. The Power Button will light up red when charging, and will turn off once the unit is fully charged.

Cleaning & Maintenance

For proper operation, your ClearAir Personal Air Purifier should be cleaned at least once per month, or any time a buzzing noise is noticed, which is caused by contamination on the ionizer electrode.

Turn the unit OFF and remove it from your neck.

Spray a **small amount** of isopropyl or rubbing alcohol directly into the grid and the Purification Output Nozzle, which are the plate and the round opening on the top of the unit. Allow to soak in for 30 seconds.

Use compressed air (canned air) or blow into the top of the unit to dislodge the particulates which adhere to the ionizer electrode.

Vacuum the Purification Output Nozzle and Fanned Air Intakes.

NOTE: Sticking anything into the Purification Output Nozzle (the round opening in the grid) will permanently damage the emitter, rendering your ClearAir Personal Air Purifier useless and will void the warranty. Cleaning the inside of the unit is limited to the steps noted above.

Warranty Information

Your ClearAir Personal Air Purifier is warranted to be free from all defects in material and workmanship in normal household use for a period of 1 year from date of purchase. The warranty is granted only to the original purchaser. The warranty is subject to the following provisions. The warranty does not cover normal wear and tear. Any damages or malfunctions caused by negligence, abuse, improper use or use not in accordance with the Owner's Manual are not covered by this warranty. If the unit is dropped, damaged, immersed in or splashed with liquids, these are not covered by this warranty. Likewise, any defects or damages caused by unauthorized service or alterations are not covered. Natural Health Partners, LLC will, at its option, repair or replace a defective ClearAir Personal Air Purifier that is covered by this warranty. As a matter of warranty policy, Natural Health Partners, LLC will not refund the customer's purchase price. To obtain warranty service you must return the defective ClearAir Personal Air Purifier along with proof of purchase to Natural Health Partners, LLC. All delivery charges on parts, or units, submitted under this warranty shall be borne by purchaser. Unless this warranty is expressly renewed or extended by Natural Health Partners, LLC, any repaired or replaced part of unit shall be warranted to the original purchaser only for the length of the unexpired portion of the original warranty.

FURTHER LIMITATIONS AND EXCLUSIONS ARE AS FOLLOWS: Any warranty that may be implied in connection with your purchase or use of the ClearAir Personal Air Purifier, including any warranty of merchantability is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall Natural Health Partners, LLC be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the ClearAir Personal Air Purifier. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Troubleshooting

If the indicator light does not come on, the battery may need to be charged.

If there is no airflow present when you turn on your ClearAir Personal Air Purifier, the battery may need to be charged.

A buzzing noise is not uncommon and is caused by contamination on the ionizer electrode. This can typically be stopped by a quick blast of air from your mouth or from canned air into the top of your ClearAir Personal Air Purifier. Regular cleaning and maintenance should also be followed as some contaminants require the use of alcohol to remove.

Product Specifications

Battery	Rechargeable Lithium
Battery Life	28 hours (after 5 hour charge)
Unit Dimensions	2" W x 3" H x 3/4" D
Unit Weight	2.2 oz.
Ion Density	5 million ions/cc
Ozone Output	Less than .03 ppm
Warranty	1 Year Manufacturer's Warranty

DISTRIBUTED BY: NHP, 125 SW 3rd Place
Cape Coral, FL 33991 USA (877) 985-2696

Made in China

20315-v503