

DR. MERCOLA®



ClearAir
fridge air purifier

Owner's Manual

Welcome

Thank you for purchasing Dr. Mercola's ClearAir Fridge Air Purifier. Your new refrigerator purifier provides you with a fresher, cleaner, odor-free refrigerator environment while extending the life of your fruits and vegetables. Please read through the usage and service instructions outlined in this owner's manual.

Table of Contents

Welcome	2
Packaged Materials	3
Diagrams	3
Cautions & Warnings	4
Product Specifications	5
Getting Started	6
Charging	6
Cleaning & Maintenance	7
Warranty Information	8


Packaged Materials

1 ClearAir Fridge Air Purifier

1 USB A to USB Type C Power Cord (adapter not included)

1 Owner's Manual

Diagrams

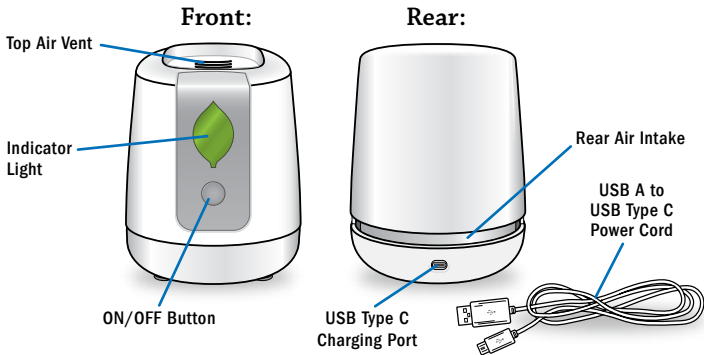

Cautions & Warnings



Do not operate this unit unless it is completely assembled.



Do not block the Top Air Vent or Rear Air Intake.



Do not operate this unit near heat source, open flame or flammable/combustible fluids.



Do not allow unit to come in contact with water.



There are no user-serviceable parts inside the unit.



This unit is not intended for use in a freezer, or for room air purification.



This unit is not intended for outdoor use.

Product Specifications

Power Source	5V DC, Lithium Ion Battery
Battery Life	18-24 Days
Unit Dimensions	3.44" H x 2.875" W x 2.875" D
Unit Weight	6.35 oz
Activated Oxygen Output	3 mg/h
Effective Area	17.7 ft ³
Warranty	1 Year Manufacturer's Warranty

Getting Started

1. Turn the ClearAir Fridge Air Purifier on by pressing the ON/OFF Button once.
NOTE: The Indicator Light flashes GREEN to show the unit is on. If the Light doesn't flash GREEN, charge the unit (see below).
2. Place the unit anywhere in your refrigerator, taking care not to put anything against the Top Air Vent or Rear Air Intake.
3. While on, the unit will provide 5 minutes of sterilization and deodorization every hour. To turn the ClearAir Fridge Air Purifier off, press the ON/OFF button again.
NOTE: The Light always flashes GREEN when the refrigerator door is open and the unit has enough charge. The Light turns off automatically when the refrigerator door is closed to preserve battery life, but the unit is still working.

Charging

When the ClearAir Fridge Air Purifier needs to be charged, a beeping sound and a RED Indicator Light will emit only when the refrigerator door is opened. Remove unit from the refrigerator and connect a powered USB Type C Cable to the Charging Port. The unit is charged and ready when the Charging Port Light changes from RED to GREEN.

Initial charging time varies and can take up to eight hours. After this first charge, the unit will only take four to six hours to charge. The charge will last about three weeks before needing to be charged again.

Cleaning & Maintenance

NOTE: For proper operation, the unit should be cleaned every 6 months.

1. Remove the ClearAir Fridge Air Purifier from your refrigerator and turn it off.
2. Carefully vacuum out the Rear Air Intake and the Top Air Vent.
NOTE: Blowing air into the Rear Air Intake or Top Air Vent in order to clean the unit is not advised. Doing so may limit the quality of the purified air produced by the unit.
3. Dip a cotton swab in Isopropyl Alcohol and insert it into the Top Air Vent. Gently rotate the swab and clean the entire area until all visible contamination has been removed. Use a clean cotton swab to dry the cleaned area. Repeat with the Rear Air Intake.
4. Wipe down the outside of the unit with a damp cloth.
5. Let the unit dry before charging or resuming operation.

Warranty Information

1 YEAR LIMITED WARRANTY

Dr. Mercola's ClearAir Fridge Air Purifier is warranted to be free from all defects in material and workmanship in normal household use for a period of 1 year from date of purchase. The warranty is granted only to the original purchaser. The warranty is subject to the following provisions. The warranty does not cover normal wear and tear. Any damages or malfunctions caused by negligence, abuse, improper use or use not in accordance with the Owner's Manual are not covered by this warranty. If the unit is dropped, damaged, immersed in or splashed with liquids, these are not covered by this warranty. Likewise, defects or damages caused by unauthorized service or alterations are not covered. Using this unit for commercial purposes voids this warranty. Natural Health Partners, LLC will at its option, repair or replace a defective part on the ClearAir Fridge Air Purifier that is covered by this warranty. As a matter of warranty policy, Natural Health Partners, LLC will not refund the customer's purchase price. To obtain warranty service you must return the defective Fridge Air Purifier along with proof of purchase to Natural Health Partners, LLC. All delivery charges on parts or units submitted under this warranty shall be borne by purchaser. Unless this warranty is expressly renewed or extended by Natural Health Partners, LLC any repaired or replaced part of the unit shall be warranted to the original purchaser only for the length of the unexpired portion of the original warranty.

FURTHER LIMITATIONS AND EXCLUSIONS ARE AS FOLLOWS: Any warranty that may be implied in connection with your purchase or use of the Dr. Mercola's ClearAir Fridge Air Purifier including any warranty of merchantability is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above warranty may not apply to you. Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall Natural Health Partners, LLC be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the Dr. Mercola's ClearAir Fridge Air Purifier. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

DISTRIBUTED BY: NHP, 125 SW 3rd Place
Cape Coral, FL 33991 USA (877) 985-2696

Made in China
20313-v102