

DR. MERCOLA®



*ClearAir*  
room air purifier

**Owner's Manual**

# Welcome

Thank you for purchasing Dr. Mercola's ClearAir Room Air Purifier. This low maintenance, small room air purifier has been designed to provide you with a cleaner living space and assist with odor removal. Please read through the usage and service instructions outlined in this owner's manual.

## Table of Contents

Welcome .....	2
Packaged Materials .....	3
Diagrams .....	3
Cautions & Warnings .....	4
Product Specifications .....	5
Getting Started .....	5
Cleaning & Maintenance .....	6
Warranty Information .....	7

# Packaged Materials

1 ClearAir Room Air Purifier


1 Owner's Manual

## Diagrams

**Front:**

**Purification  
Dial**


**Purification  
Output Nozzle**

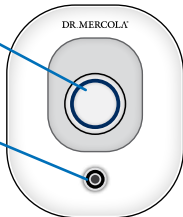

**Rear:**

**Outlet Plug**

**Fan Air Intake**

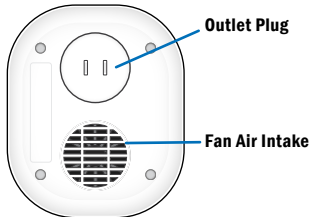

# Cautions & Warnings

**The ClearAir Room Air Purifier is not a medical device and should not be used to alleviate any medical issues that you may have. Please consult your physician before using the ClearAir Room Air Purifier if you are worried that the machine could cause adverse effects.**



Do not operate this unit near heat source, open flame or flammable/combustible fluids.



Do not allow the unit to come in contact with water.



Do not operate this unit unless it is completely assembled.



There are no user-serviceable parts inside the unit.

# Product Specifications

Voltage .....	100-240V, 50/60 Hz
Unit Dimensions.....	4.25" H x 3.50" W x 2.50" D
Unit Weight.....	6.35 oz.
Effective Area .....	50 ft <sup>2</sup>
Warranty .....	1 Year Manufacturer's Warranty

## Getting Started

1. Rotate the Purification Dial all the way to the left in order to start in the OFF position.
2. Plug the unit into a wall outlet and rotate the Purification Dial to the right until the unit turns on.

**NOTE:** This is the minimum setting for purification output.

3. Set the desired strength of the unit by turning the Purification Dial slowly to the right. A good starting point is to set the unit just at the point you detect a “clean odor” with your nose.

# Cleaning & Maintenance

**NOTE:** For proper operation, the unit should be cleaned at least once per month but may need to be done more frequently. To determine if your unit requires more frequent cleaning, regularly inspect the Purification Output Nozzle. If debris is visible, the unit is in need of cleaning.

1. Turn the unit OFF and remove it from the wall outlet.
2. Vacuum out the Fan Air Intake until clean.

**NOTE:** Blowing air directly into the Fan Air Intake to clean the unit is not advised. This will cause a restriction in future air flow and may limit the quality of the purified air produced by the unit.

3. Dip a cotton swab in Isopropyl Alcohol and insert it into the Purification Output Nozzle. Gently rotate the swab and clean the entire area until all visible debris has been removed. Use a new cotton swab to dry the previously cleaned area.
4. Dust exterior of unit with dry duster or cloth.
5. Allow the unit to dry, face down.
6. Plug your unit back into the outlet and turn the dial to the maximum purification output. Verify that there is a clean smell emitting from your unit. Once a clean smell emits, you may reduce the dial to your desired purification output level.

# Warranty Information

## 1 YEAR LIMITED WARRANTY

Dr. Mercola's ClearAir Room Air Purifier is warranted to be free from all defects in material and workmanship in normal household use for a period of **1 Year** from date of purchase. The warranty is granted only to the original purchaser. The warranty is subject to the following provisions. The warranty does not cover normal wear and tear. Any damages or malfunctions caused by negligence, abuse, improper use or use not in accordance with the Owner's Manual are not covered by this warranty. If the unit is dropped, damaged, immersed in or splashed with liquids, these are not covered by this warranty. Likewise, any defects or damages caused by unauthorized service or alterations are not covered. Natural Health Partners, LLC will, at its option, repair or replace a defective ClearAir Room Air Purifier that is covered by this warranty. As a matter of warranty policy, Natural Health Partners, LLC will not refund the customer's purchase price. To obtain warranty service you must return the defective ClearAir Room Air Purifier along with proof of purchase to Natural Health Partners, LLC. All delivery charges on parts, or units, submitted under this warranty shall be borne by purchaser. Unless this warranty is expressly renewed or extended by Natural Health Partners, LLC, any repaired or replaced part of unit shall be warranted to the original purchaser only for the length of the unexpired portion of the original warranty.

**FURTHER LIMITATIONS AND EXCLUSIONS ARE AS FOLLOWS:** Any warranty that may be implied in connection with your purchase or use of the ClearAir Room Air Purifier, including any warranty of merchantability is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall Natural Health Partners, LLC be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the ClearAir Room Air Purifier. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

DR. MERCOLA®

**DISTRIBUTED BY:** NHP, 125 SW 3rd Place  
Cape Coral, FL 33991 USA (877) 985-2696

**Made in China**  
20277-v500